

# FOREWORD

This manual contains maintenance and repair procedures for the 1987 VAN.

Applicable models: YR 22, 29, 31, 32 series

The manual is divided into 22 sections and 5 appendixes with a thumb index for each section at the edge of the pages.

Please note that the publications below have also been prepared as relevant service manuals to the components and systems in this vehicle.

Manual Name	Pub. No.
1987 Van Electrical Wiring Diagram Manual	EWDO26U
Van & Model-F Collision Damaged Body Repair Manual (2WD only)	BRM003E
1987 model New Car Features	NCF013U

All information in this manual is based on the latest product information at the time of publication. However, specifications and procedures are subject to change without notice.

**TOYOTA MOTOR CORPORATION**

# 1987 TOYOTA VAN REPAIR MANUAL

INTRODUCTION	IN
MAINTENANCE	MA
ENGINE MECHANICAL	EM
EMISSION CONTROL SYSTEMS	EC
EFI SYSTEM	FI
COOLING SYSTEM	CO
LUBRICATION SYSTEM	LU
IGNITION SYSTEM	IG
STARTING SYSTEM	ST
CHARGING SYSTEM	CH
CLUTCH	CL
MANUAL TRANSMISSION	MT
AUTOMATIC TRANSMISSION	AT
TRANSFER	TF
PROPELLER SHAFT	PR
FRONT AXLE AND SUSPENSION	FA
REAR AXLE AND SUSPENSION	RA
BRAKE SYSTEM	BR
STEERING	SR
BODY ELECTRICAL SYSTEM	BE
BODY	BO
AIR CONDITIONING SYSTEM	AC
SERVICE SPECIFICATIONS	A
STANDARD BOLT TORQUE SPECIFICATIONS	B
SST AND SSM	C
AUTOMATIC TRANSMISSION	D
HYDRAULIC CIRCUIT	D
ELECTRICAL WIRING DIAGRAMS	E